

# Sierra Wireless® RV55 Quick Start Guide

This guide provides instructions for quickly getting your Sierra Wireless® AirLink® RV55 router configured and connected. For more information refer to the:


- AirLink RV55 Hardware User Guide
- AirLink RV55 Software Configuration User Guide

Both are available for download from the Sierra Wireless web site ([source.sierrawireless.com](http://source.sierrawireless.com)). Click **sign up** to register for free.

**NOTE:** Remote ACEmanager access is disabled by default for security. If required, enable it remotely using ALMS or locally using ACEmanager (Services > ACEmanager) and change the default password (Admin > Change Password).

## STEP 1 Install the SIM Cards

1. Use a #1 Phillips screwdriver to remove the SIM card cover.
2. Slide the SIM cards into the SIM card slots until they click into place.  
By default, the SIM card in slot 1 (the upper slot) is the Primary SIM card. When the RV55 is powered on or reboots, it automatically connects to the network associated with the Primary SIM card.
3. Re-attach the cover.

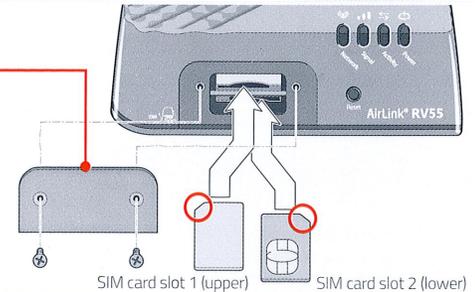

## STEP 2 Connect and Turn On the Router

**NOTE:** If you want to configure all your routers at the same time using AirLink Management Service, follow the instructions on page 2 to register your routers before applying power.

Sierra Wireless strongly recommends that you always ground the chassis using the unpainted mounting hole. For more information, refer to the RV55 Hardware User Guide.

1. Connect Cellular, Diversity and GNSS antennas (if applicable).
2. Connect the Dual Wi-Fi antennas (if applicable).

